

Quick Installation Guide

WL-LTNA

2.4/5GHz Lightning Arrester (N-male to N-female)

1. Package Contents

Thank you for choosing PLANET Outdoor Wireless Product. Before installing, please verify the contents inside the package box.



WL-LTNA x1
(Grounding wire is not included)

IMPORTANT SAFETY PRECAUTIONS:


- 1) Please check the site for possible hazards before beginning any installation.
- 2) Try to keep the antenna connection a distance from the power line. People may be injured or killed if they touch or hold any part of the equipment that comes in contact with the power line.



- 3) Make sure all towers and masts are securely grounded, and electrical cables connected to antennas have grounded lightning arresters.
- 4) Do not connect when a storm is near or when transmissions are occurring.

2. Hardware Specifications


Frequency Range	0 ~ 6GHz
Gain Loss	≤ 0.2dB
Maximum Withstand Current	20kA
Connector Type	N-female (Jack) to N-male (Plug)

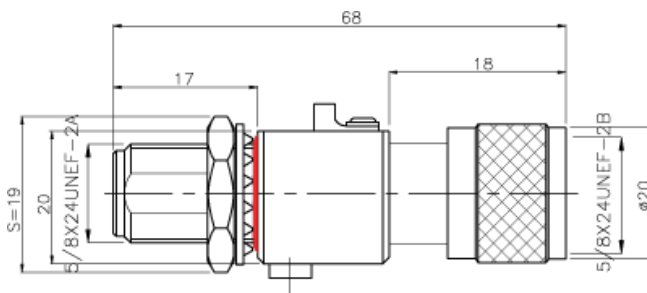

3. Hardware Installation

Refer to the figure below to install the WL-LTNA between the external antenna and Outdoor wireless AP.

※ Please remember to finish grounding by consulting the local electrical experts.

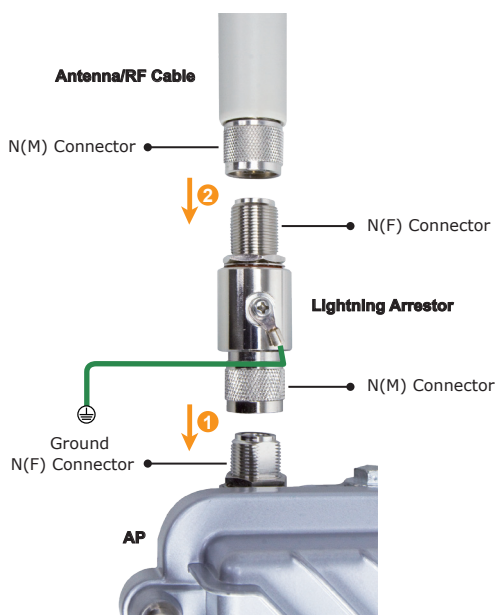

Further Information:

The above steps introduce the simple installations and configurations of the device. For further configurations, please refer to the installation guide, which can be downloaded from the website.

WL-LTNA:

<http://www.planet.com.tw/en/support/download.php?type1=4&model=39530&type=2>



If you have further questions, please contact the local dealer or distributor where you purchased this product.

PLANET Technology Corp.

10F, No 96, Minquan Rd., Xindian Dist., New Taipei City 231, Taiwan

2011-E30250-001

