



IR Transmission Series

# User Manual

---

Model : IEC-0001E-05

IR Emitter with Bare ends tinned E




## Introduction

IEC-0001E-05 is a single IR emitter..


## Features

- Cable length 300cm...

## Installation View

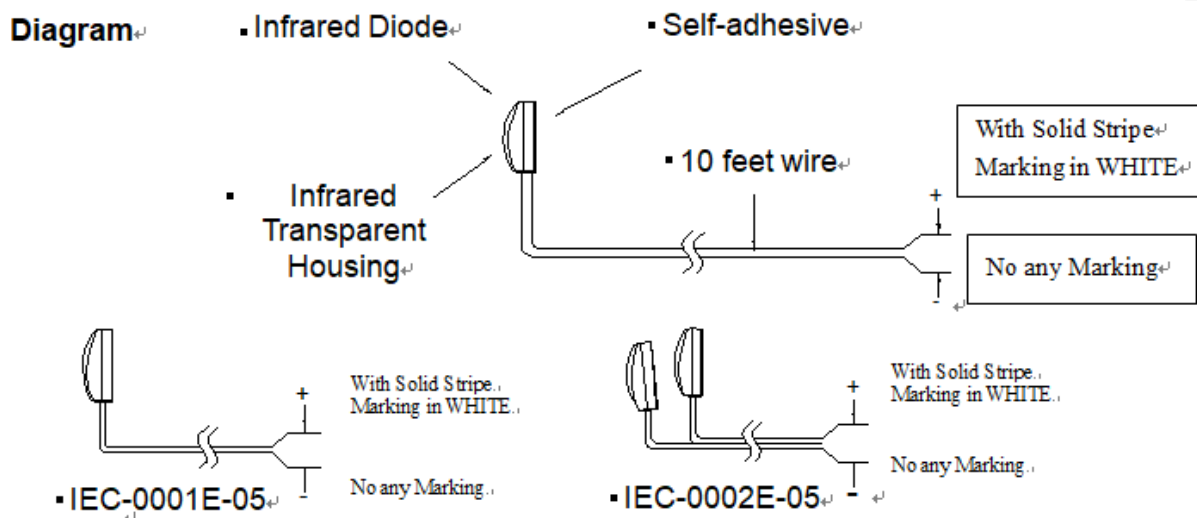


## Standard installation

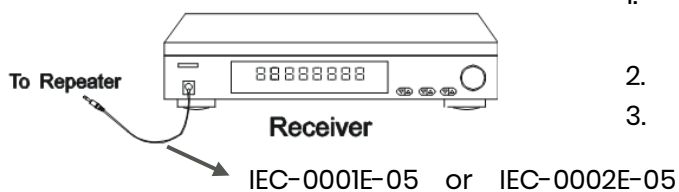


1. IR emitter (flat side) attached directly to IR sensor window
2. More reliable activated
3. Looks nice

## Attach IR emitter at inside of shelf

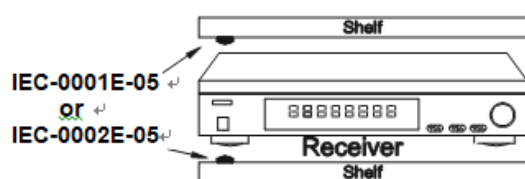

1. Attach IR emitter on above or below of the IR window
2. Less reliable activated

## Cabinet With door Installation

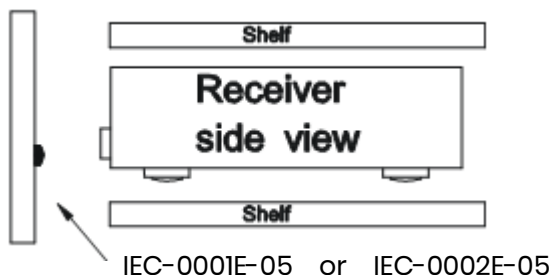

1. IR emitter is attached to rack door, round shape side facing the IR window
2. Less reliable activated

#### Note

1. Make sure mounting surface are clean and dry for fixed well
2. You cannot connect the IR emitter directly to a power supplies or battery

#### Specification

ITEM NO.	IEC-0001E-05
Support	
Reception Angle	±45°
Ports & Interfaces	
Connector	1 x Strip and Tin End
Physical Characteristics	
Cable Length	3M