



Network Camera Quick Start Guide


- Please read this instruction carefully before using the product and keep it for further reference.
- All the examples and pictures used here are for reference only.
- The contents of this manual are subject to change without notice.

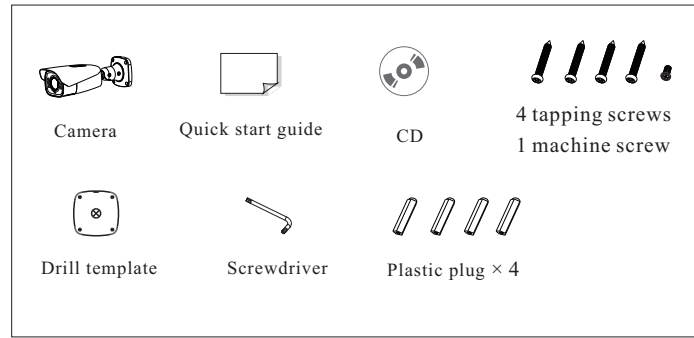

3 Overview

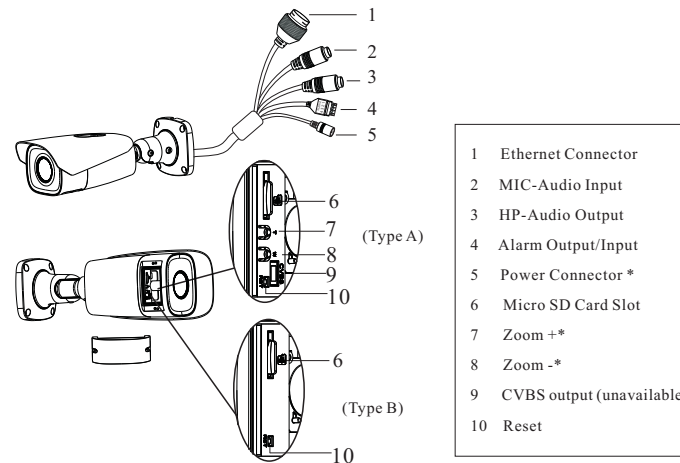


* If the PoE switch is used to power the camera, DC12V power supply is not required.
* Only some models support T&W buttons. If your camera doesn't have these two buttons, please skip 7 and 8.

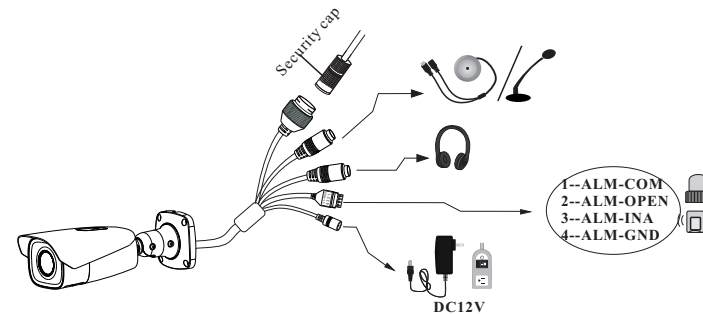


● Connecting Alarm Input/Output

 
Alarm Input



Alarm Output

 

● Connecting Network Cable

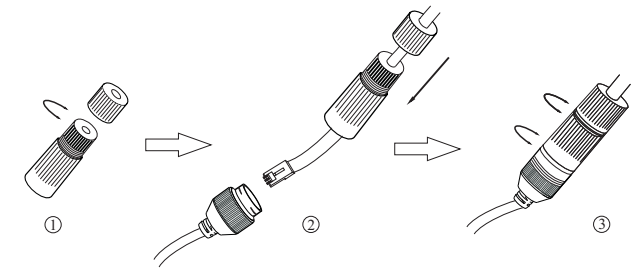


- ① Loosen the nut from the main element.
- ② Run the network cable (without RJ 45 connector) through the both elements. Then crimp the cable with RJ 45 connector.
- ③ Connect the cable to the hermetic connector. Then tighten the nut and the main cover.

4 Installation


Please make sure that the wall or ceiling is strong enough to withstand 3 times the weight of the camera. Please install the camera under dry environment.

- ① Attach the drill template to the place where you want to fix the camera. Then drill the screw holes and the cable hole on the wall according to the drill template.

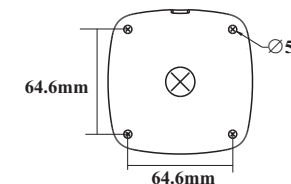


2 Package


- Route the cables and connect the relevant cables.
- Fasten the mounting base to the wall with the screws provided.

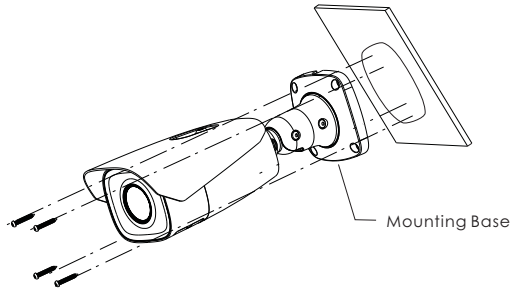

- Bracket adjustment. Before adjustment, preview the image of the camera on a monitor and then loosen the fixed screws to adjust the view angle of the camera. After that, tighten the fixed screws.

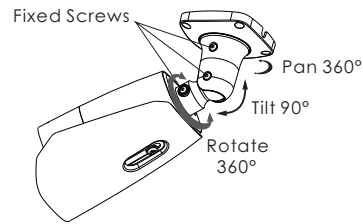


- Open the cover of the camera as shown in the following figure and then insert a micro SD card.
- Press T/W button to obtain an optimum image. Before adjustment, view the image of the camera on a monitor.

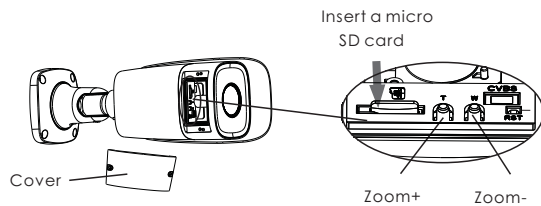


Note: Only some models support T&W buttons. If your camera doesn't have these two buttons, please skip step ⑥.

- Install the cover back to the camera and fix it firmly with the screws. (Note that the cover should not be installed unevenly.)

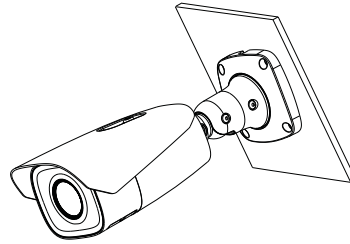


5 Network Connection


● Access the camera through IP-Tool

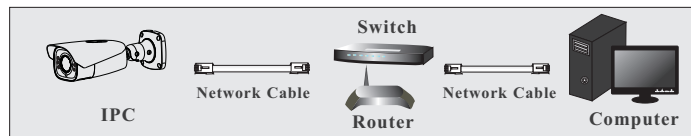

- Make sure that the camera and the PC are well connected via LAN.
- Find the IP-Tool from the CD and then install it in the computer. After that, run the IP-Tool as shown below.

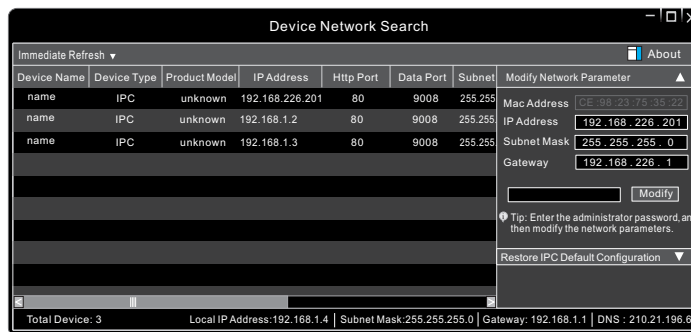

- Modify the IP address. The default IP address of this camera is 192.168.226.201. Click the information of the camera listed in the above table to show the network information on the right hand. Modify the IP address and gateway of the camera and make sure its network address is in the same local network segment as the computer's. Please modify the IP address of your device according to the practical situation.

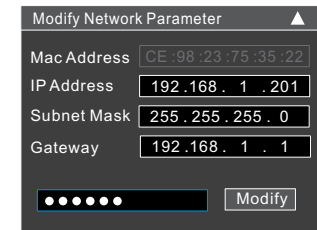

For example, the IP address of your computer is 192.168.1.4. So the IP address of the camera shall be changed to 192.168.1.X and the gateway shall be changed to 192.168.1.1. After modification, please enter the password of the administrator and click “Modify” button to modify the settings.

⚠ The default password of the administrator is “123456”.

- Double-click the camera listed in the IP-Tool or manually enter the IP address in the address bar of the web browser to connect IP-CAM. Then follow directions to download and install the plugin.

- Enter the username and password in the login interface.

⚠ The default username is **admin**; the default password is **123456**.